



PROJECT REPORT

ON

ROUTE SURVEY

OF

**OKE-OSE- SENTU ROAD, OFF OLD JEBBA ROAD, ILORIN EAST LOCAL
GOVERNMENT AREA, KWARA STATE.**

BY

ALADE FLORENCE ABOSEDE

MATRIC NO.: ND/23/SGI/FT/071

**BEING A PROJECT REPORT SUBMITTED TO THE DEPARTMENT
OF SURVEYING AND GEO-INFORMATICS, INSTITUTE OF
ENVIRONMENTAL STUDIES.**

**IN PARTIAL FULFILMENT OF THE REQUIREMENT FOR THE
AWARD OF ORDINARY NATIONAL DIPLOMA (OND) IN
SURVEYING AND GEO-INFORMATICS, KWARA STATE
POLYTECHNIC, ILORIN.**

JUNE, 2025

CERTIFICATE

I hereby certify that all the field work and information combined in this project write up were obtained as a result of observation and measurements made by me **ALADE FLORENCE ABOSEDE** with matriculation number **ND/23/SGI/FT/0071** and that the survey was carried out in accordance with survey rules and regulations and departmental instructions.

ALADE FLORENCE ABOSEDE

DATE

ND/23/SGI/FT/0071

CERTIFICATION

This is to certify that **ALADE FLORENCE ABOSEDE** with matriculation number **ND/23/SGI/FT/0071** has successfully carried out the survey duties contained therein in this project write up under my instruction and direct supervision.

SURV.ABDULSALAM AYUBA
SURV.OGUNTAYO BERNARD

Project supervisors

DATE

SURV.AWOLEYE RAPHEAL.S
DATE

Project coordinator

SURV.A.ISAU

Head of Department

DATE

SURV.OPALEYE J.O

External Examiner

DATE

DEDICATION

This project is dedicated to the Almighty God for his mercy and for loving guidance **MR and MRS ALADE** who saw me through the pregame.

ACKNOWLEDGEMENT

All glory honor adoration to God Almighty, the gracious one who has given me the opportunity complete my ND programmed. My appreciation goes to my project supervisors in the person of Surv. Abdulsalam Ayuba And Suvr. Benard Oguntayo for their strictly and through supervision. I will like to thank all lecturers of this noble department starting from H.O.D Surv. Abinbola isau, Surv. A. Ayuba, Mr. Bello Felix Diran, Surv. Williams Kzeem, Surv. A.O. Akinyede, and also the Director of special duty in IES Surv. A.G. Aremu and other supportive staff of the department of Surveying and Geo-informatics, Kwara State Polytechnic, Ilorin.

I also express my sincere gratitude to my wonderful parents **Mr. and Mrs.**

ALADE for their financial morals support toward the competition of this program. You will reap the fruit of your labour (Amen).

ABSTRACT

This project report contains the reconnaissance, field work, data processing exercise, and every other procedure undertaken in the course of this project which focused on Route Survey which involves acquisition of data for the purpose of road construction design for the road from GT junction to SENTU Road in Oke-Ose Ilorin East local government of Ilorin, Kwara State. The field work involved, reconnaissance, distance measurement with DGPS and, the numbers of intersection point (I.P), benchmark (B.M), using CORS. The acquired data were processed using appropriate formulae. The plans were produced from the processed data at suitable scales both in digital and graphic formats. Finally a project report was written.

TABLE OF CONTENTS

TITLEPAGE	-	-	-	-	-	-	-	-	-	i
CERTIFICATE	-	-	-	-	-	-	-	-	-	ii
CERTIFICATION	-	-	-	-	-	-	-	-	-	iii
DEDICATION	-	-	-	-	-	-	-	-	-	iv
ACKNOWLEDGEMENT	-	-	-	-	-	-	-	-	-	v
ABSTRACT	-	-	-	-	-	-	-	-	-	vi
TABLE OF CONTENT	-	-	-	-	-	-	-	-	-	vii
LIST OF TABLE	-	-	-	-	-	-	-	-	-	viii
LIST OF FIGURES	-	-	-	-	-	-	-	-	-	ix

CHAPTER ONE

1.0 INTRODUCTION	-	-	-	-	-	-	-	-	-	1
1.1 AIM OF THE PROJECT	-	-	-	-	-	-	-	-	-	3
1.2 OBJECTIVE OF THE PROJECT	-	-	-	-	-	-	-	-	-	4
1.3 SCOPE OF THE PROJECT	-	-	-	-	-	-	-	-	-	4
1.4 PERSONNEL	-	-	-	-	-	-	-	-	-	5

1.5 LOCATION OF THE SITE -	-	-	-	-	-	-	5
1.5.1 MAP OF THE SITE LOCATION	-	-	-	-	-	-	6
 CHAPTER TWO							
2.0. LITERATURE REVIEW	-	-	-	-	-	-	8
 CHAPTER THREE							
3.0 METHODOLOGY	-	-	-	-	-	-	16
3.1 RECONNAISSANCE	-	-	-	-	-	-	16
3.1.1 OFFICE PLANNING	-	-	-	-	-	-	17
3.1.2 FIELD PLANNING	-	-	-	-	-	-	17
3.2 FIELD PREPARATION	-	-	-	-	-	-	18
3.3 MOMENTATION	-	-	-	-	-	-	18
3.4 EQUIPMENT USED -	-	-	-	-	-	-	20
3.4.1 HARDWARE USED	-	-	-	-	-	-	20
3.4.2 SOFTWARE USED	-	-	-	-	-	-	20
3.5 METHOD USED	-	-	-	-	-	-	20

CHAPTER FOUR

4.0 DATA PROCESSING AND RESULT ANALYSIS	-	-	-						24
4.1 DATA DOWNLOADING	-	-	-	-	-	-	-	-	24
4.2 DATA PROCESSING	-	-	-	-	-	-	-	-	25
4.3 RESULT ANALYSIS	-	-	-	-	-	-	-	-	26
4.3.1 LONGITUDINAL/HORIZONTAL ALIGNMENT	-	-							26
4.4 INFORMATION PRESENTATION/ PLAN PRODUCTIO	-	-							27

CHAPTER FIVE

5.0 SUMMARY, PROBLEM ENCOUNTER, RECOMMENDATION AND CONCLUSIO N	-	-	-	-	-	-	-	-	30
5.1 SUMMARY	-	-	-	-	-	-	-	-	30
5.2 PROBLEM ENCOUNTERED	-	-	-	-	-	-	-	-	30
5.3 SOLUTION TO THE PROBLEM	-	-	-	-	-	-	-	-	31
5.4 RECOMMENDATION	-	-	-	-	-	-	-	-	31
5.5 CONCLUSION	-	-	-	-	-	-	-	-	32
REFERENCES	-	-	-	-	-	-	-	-	33
APENDIX	-	-	-	-	-	-	-	-	35

CHAPTER ONE

1.0. INTRODUCTION

Surveying plays a vital and a crucial role in the development of any engineering projects such as road alignment, irrigation project, hydroelectric scheme, tunnels, construction of dams, building construction e.t.c.

Surveying are fundamental tools for gathering information and understanding the world around us. They encompass a wide range of activities, from meticulously measuring and mapping physical landscapes to thoroughly collect data about human opinion attitudes and behaviors. The essence of a survey lies in its systematic approach to acquiring knowledge, allowing for informed decision making and problems solving across various fields.

As its cores, a survey involves the meticulous gathering of data through observation, measurements and questioning. In the realms of engineering, surveys play a pivotal role in planning and designing infrastructure projects. By accurately measuring the terrain and identifying obstacles, engineers can ensure that roads, bridge and buildings are built safely and efficiently. Environmental scientists rely on survey to assess the impact of human activities on the environment. Through detailed observation and data collection, they can identify sensitive ecosystem, monitor pollution levels, and develops strategies for sustainable development.

Route survey is a type of geodetic survey. It is an essential component of any linear infrastructure projects from roads and railways to pipeline and power line. This survey provides the critical data necessary for the design, construction, and maintenance of these vital infrastructure elements. Their importance stems from the need for accurate and comprehensive information about the terrain, existing structure and environmental conditions along the proposed route.

Route survey is to gather detailed information about the alignment and elevation of the proposed route. This includes surveying the existing terrain, identifying any obstacles or constraints, and determine the optimal path for the infrastructure. The data collected during the survey is then used to create detailed plans and drawings which serve as the foundation for the design and construction phases.

Route survey play a crucial role in environmental impact assessment. By accurately mapping the terrain and identifying sensitive ecological areas, surveyor can help minimize the environmental impact of the project. This involves identifying potential risks, such as wetlands, endangered species habitat, and cultural heritage sites, and incorporating mitigation measures into the design and construction process. The importance of route survey cannot be overstated, as they provide the foundation for successful and sustainable infrastructure development.

Route survey can be seen as the survey carried out in establishing the horizontal and vertical alignment of a particular area needed for social utilities like highways, railways, transmission lines, pipelines e.t.c. It can also be applied to where an alignment is needed for the rehabilitation or expansion of existing route. It can be said to have the aim and objective of providing information of the arrangements of the terrain, the details on it and the topographical information.

During the planning in route survey, the surveyor should know the specifications which will enable him/her carry out the job accurately, less labour and time consumption in order to ensure the following:

- a) Easy communication and transportation network between the communities involved.
- b) Acquisition of data which will enable the construction engineer to carry out design on a specific site.

1.1 AIM OF THE PROJECT

The main aim of the project is to gather data of the existing ground level along the proposed route to aid engineering design and construction of the road, and to establish the horizontal and vertical alignment of the road.

1.2 OBJECTIVE OF THE PROJECT

- Determine the optical route
- Gathering accurate data
- Minimize costs and risk
- Ensuring safety and functionality
- Supporting detailed design

1.3 SCOPES OF THE PROJECT

- Reconnaissance survey of the project site
- Office planning
- Preliminary survey (Data collection)
- Detailed survey
- Monumentation
- Data acquisition using Differential GPS
- Data downloading editing
- Data processing and analysis
- Information presentation both hard/soft copies

1.4 PERSONNEL

The personnel involved in the survey are;

NAME	MATRIC NUMBER	ROLE
ALADE FLORENCE ABOSEDE	ND/23/SGI/FT/0071	GROUP LEADER
AWOSENL BOLUWATIFE .O	ND/23/SGI/FT/0072	MEMBER
KAZEEM FARIDAH ENIOLA	ND/23/SGI/FT/0069	MEMBER
MURITALA MUJIDAH KEHINDE	ND/23/SGI/FT/0068	MEMBER
BADMUS FATHIA ARIKE	ND/23/SGI/FT/0070	MEMBER
AZEEZ FARUQ AOMIDE	ND/23/SGI/FT/0060	MEMBER
OLAREWAJU BOLUWATIFE .A	ND/23/SGI/FT/0067	MEMBER

1.5 LOCATION OF THE SITE

The study area is at Sentu – Oke-Ose Road, off Old Jebba road, Ilorin East Local Government Area Kwara State. The length of this project is 5km covered the Latitude (8°32'54.40'')N Longitude(4°39'10.90'')E and Latitude (8°30'52.57'')N Longitude (4°40'55.30'')E.

1.5.1 MAP OF THE SITE LOCATION

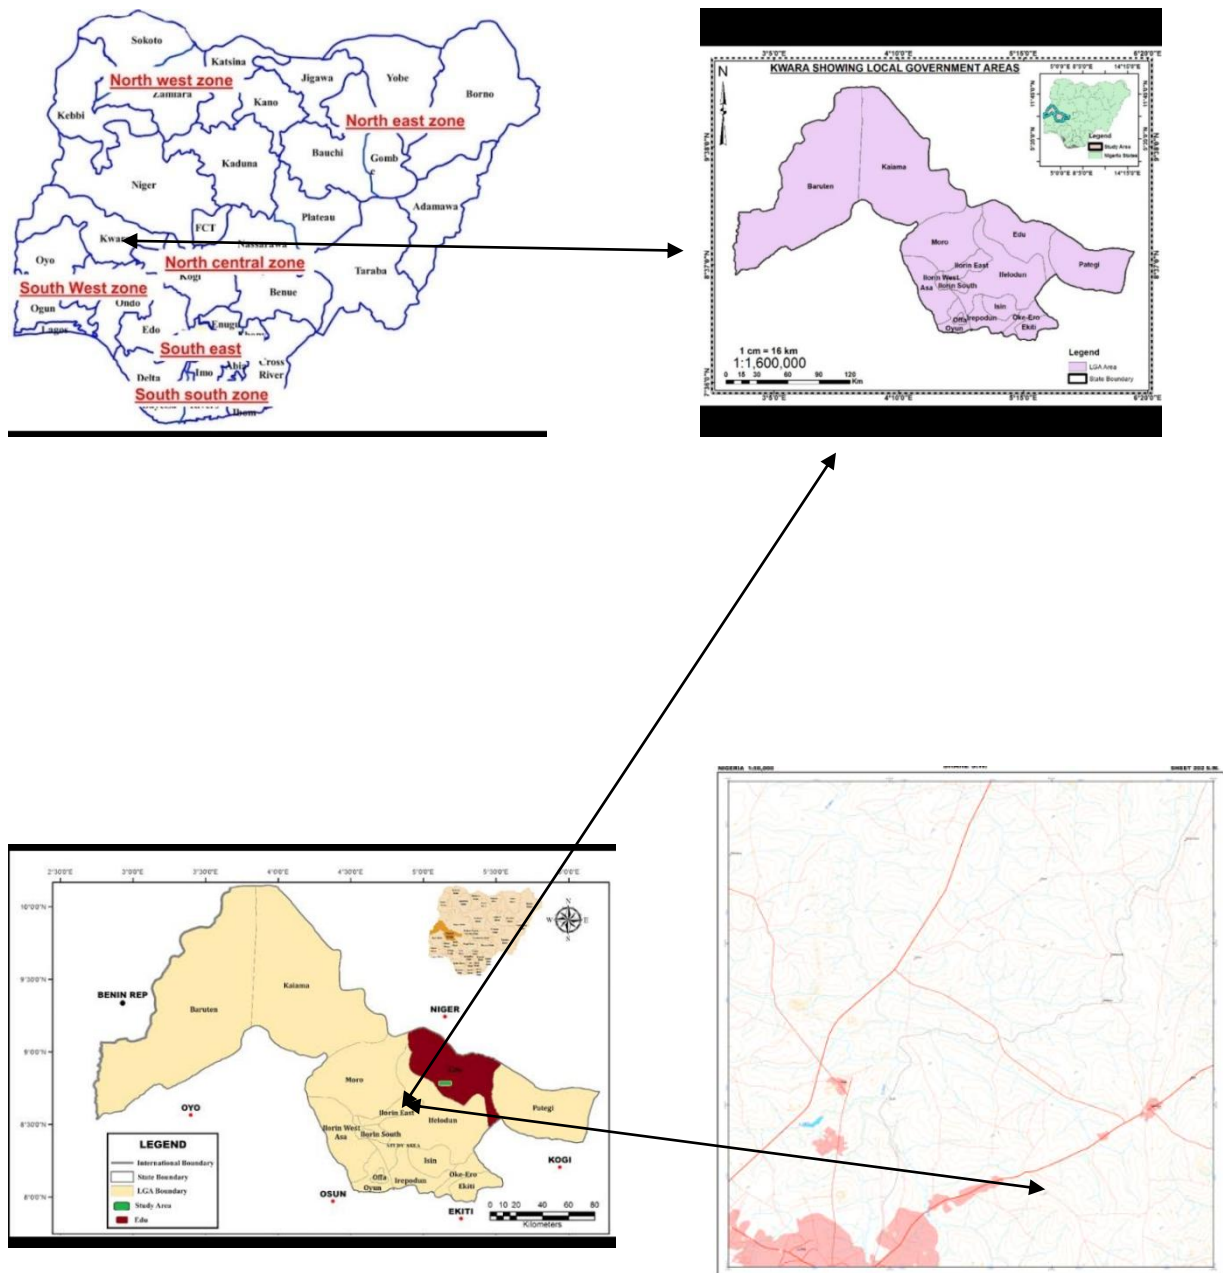


FIG.1.0 Showing Nigeria map, Kwara state map, and topographical map covering the project area .

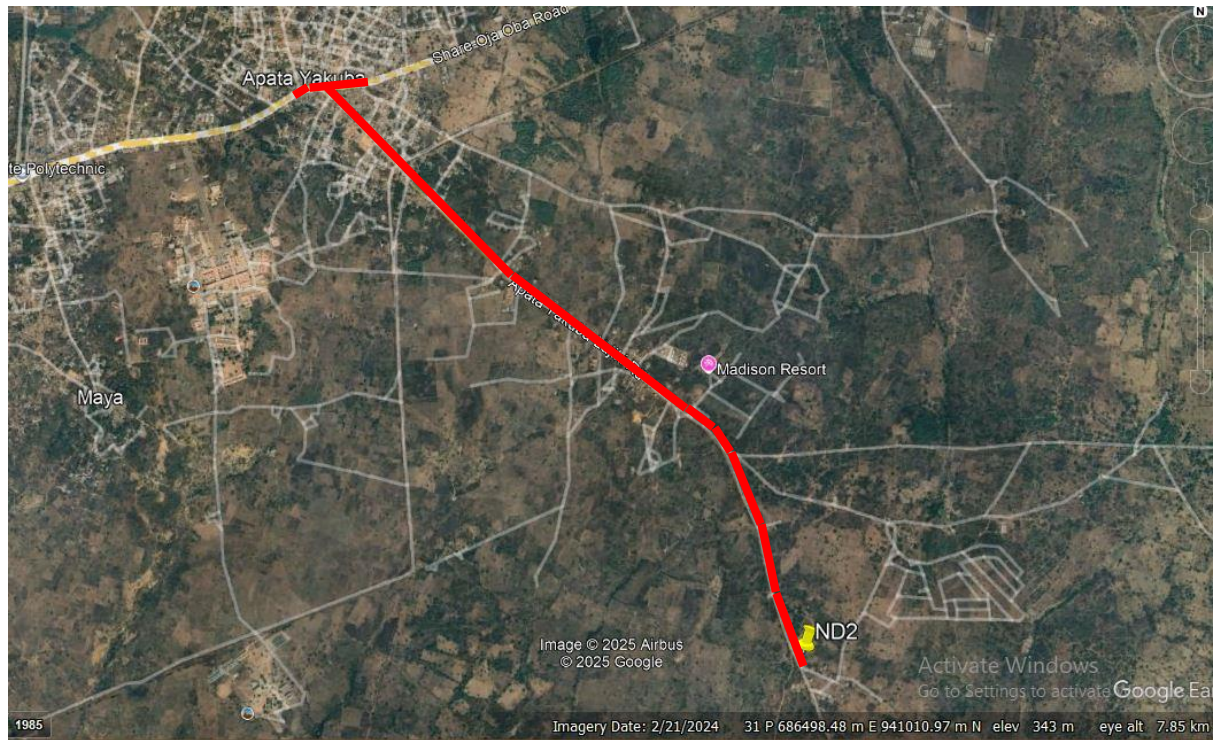


Fig. 1.1 showing the imagery covering the project area

CHAPTER TWO

2.0 LITERATURE REVIEW

Local planning handbook (2015) said routes that follows simple patterns with few turns are easier to understand for transit riders. A network of simple routes makes the whole system easier to use spontaneously with little planning. Routes that do not make a lot of deviations also provide a faster trip for riders and are less expensive to operate for the provider – meaning more service can be provided for the same resources. Communities can support this principle by encouraging development along denser, linear corridors and connecting gaps in the street grid to allow transit to have simple and direct routes in their communities.

Basak N.N (2010), defined surveying as the art and science of determining the relative position of various points or stations on the surface of the earth by measuring the horizontal and vertical distances, angles and taking the details of these point and by preparing a map or plan to any suitable scale.

Route Survey is type of engineering surveying, which provides height along a proposed route with offsets at the both sides of the centerline of the route. This serves the purpose of location, design and construction of the route networks.

Route Survey, therefore, can be explained as a survey made along a line or narrow belt or strip for location, design, and construction of any route of transportation such as highways, railways sewage and oil. It is also very useful in surveys which require the establishment of both vertical and horizontal alignment for cross-country development of utilities.

Surveying is indispensable to the engineer when planning, designing and constructing a project, so all engineers should have a thorough understanding of the limits of accuracy possible in the construction processes. This knowledge, combined with an equal understanding of the limits and capabilities of surveying instrumentation and techniques, will enable the engineer to complete the project successfully in the most economical manner and in the shortest possible time.

Engineering surveying, which was the main task in this project, was defined by M. Seedat (2012) as the type of survey which is associated with the engineering design (topographic, layout and as built) often requiring geodetic computations beyond normal civil engineering practice. It is required in planning and execution of nearly every form of construction. The equipments commonly used for this are theodolites, GNSS (GPS) and levelling instruments.

Engineering survey has assumed the goal of dimensioning the physical environment. Greater part of its responsibility is seen from the various types of surveying which are geared towards promoting accessibility, route ways, convenience, economy and spatial delineation of both natural and social

environment. He also stated that engineers and surveyors involves in site, surveying are responsible for all aspect of dimensional control on such schemes.

According to him, the main purposes of engineering surveying are:

1. To provide large scale topographical map/ plan and other measurement at the concept and design stage. Since this data forms the basis for an entire project, the reliability of the design depends to a great extent on the precision and thoroughness with which the original site survey is carried out.
2. To provide precise framework at the construction stage control from which it is possible to position the works and, most importantly, to ensure that engineering project are built in their correct relative and absolute position (this is known as setting out). In addition to these, data for the measurement of the work is also collected to enable volumes of the material to be estimated during construction.
3. To monitor structural movement on major retaining structure at the post construction stage.

History testifies that transportation is necessary to draw a country, state town or settlement to civilization by making communication among neighbours easier. Various means of transportation exist; they are transportation by air, by land and transportation by water. Land transportations involves by rails, and

roads. Road accounts for about 95% of all surface transportation in Nigeria. Road make possible socio-economic and cultural relationship among communities and create avenue for the good and management of the environment.

Good transportation, in and of itself, will not assure success in the marketplace, as the availability of transportation is a necessary but insufficient condition for economic growth. However, the absence of supportive transportation services will serve to limit or hinder the potential for a nation or region to achieve its economic potential. Thus, if a society expects to develop and grow, it must have a strong internal transportation system consisting of good roads, rail systems, as well as excellent linkages to the rest of the world by sea and air. Thus, transportation demand is a by-product derived from the needs and desires of people to travel or to transfer their goods from one place to another. It is a necessary condition for human interaction and economic competitiveness. (Garber 2009)

Transportation has contributed immensely to the economic development of the world in terms of:

- 1 Migration of people
- 2 Movement of goods and services
- 3 National integrations
- 4 Division of ideas and technology.

Most of the roads we ply were as a result of the application of route survey, for example: right of way (ROW) and acquisition survey was carried out by

Setraco Nigeria Limited on Abuja-Keffi road (52km) for the purpose of expanding the road. Automated survey method was used and some of the survey instruments used were GPS and its accessories, Total stations, EDM, Digital level etc. the survey was completed in July 2000, due to delay in paying compensation to the affected land owners, further encroachment were recorded within the right of way.

Dentata and Sawoe Nigeria limited were responsible for that of Jibiakaro Namoda-Gusau road (161km), some of the survey instruments stated above were also used. This was done to determine: the extent of the area that is needed for expansion of the road, the details of all the properties and buildings that fall within that area, knowing the details of owners of such properties for the payment of compensation for the right owner and also it aid in determining an estimate of the amount to pay as compensation (Idemudia, 2007).

Route surveying, being an aspect of engineering work is a survey that starts from the design and ends after the construction stages and it could be explained as the survey carried out in establishing the horizontal and vertical alignments of a particular area needed for social utilities like highways, railways, transmission lines, pipelines and canals. (Mikhail 2001).

In conclusion, according to Ghilani and Wolf (2006), Route survey are made to plan, design and construct highways, railroads, pipelines and other linear

projects. They normally begin at one control point and progress to another in the most direct manner permitted by field conditions.

According to Uren (1994), a longitudinal section provides information only along the center line of a proposed project, for works such as pipeline, which usually are only of a narrow extent in the form of a trench cut along the surveyed center line, a longitudinal section provides sufficient data for construction to be planned and carried out. As for cross sectioning, this is essential because once any new road formation or construction is proposed, it is certain to involve cut and fill, then there is urgent need to define the limits of both before construction starts. A useful convention is that of the width of cross sections of the road has to be marked with pegs. This is done purposely to indicate the extent of the new route to be constructed.

In a route survey, representations of the actual course of the survey and of the plane horizontal features (including the terrain, if necessary) on both sides of it within the limits of direct visibility are plotted on a mapboards using methods of instrument surveying (plane-table, tachometric, and aerial photo topographic surveying) or exploratory surveying.

For small projects involving widening or minor improvement of an existing facility, the survey may be relatively simple and may include only the obtaining of sufficient information for the designer to prepare plans and specification defining the work to be done. For more complex project involving multilane

highways on new locations, the survey may require a myriad of details, including data from specialist in related field to determine the best location, to prepare plan, specification and estimates for construction and to prepare deed description and maps for appraisal and acquisition of the necessary right of way.

In order to plan and perform the survey needed to acquire these types of data, the surveyor must be familiar with:

- 1 The geometry of horizontal and vertical curves and how they are used in the route alignment procedure
- 2 The methods of acquiring terrain data utilized in the route design procedure
- 3 The procedure followed in processing terrain data to obtain earthworks volumes
- 4 Establishing on the ground a system of stakes or other markers, both in plane and elevation from which measurement of earthworks and structure can be taken conveniently by the construction force
- 5 Given line and grade as needed either to replace stakes disturbed by construction or to reach additional points on the structure itself
- 6 Making measurement necessary to verify the location of completed parts of the structure (the as-built survey) and to determine the volume of work actually performed.

New developments in equipment such as electronic surveying system, and laser equipped alignment instrument provide powerful tools which have many applications in these areas. The detailed methods employed on these surveys vary greatly with the type, location and size of structure and with the preference of the engineering and construction organizations. Much depends on the ingenuity of the surveyors so that the correct information is given without confusion or needless effort.

Finally, after reviewing different survey jobs that have been done by different authors on the topics, it's obvious that route survey carried out from GT Junction to Sentu Junior Secondary School Road covered 5km. It was carried out using Differential GPS connected to the CORS which helps to ensure precise geospatial data collection. The CORS help to reduce the need for setting up temporary base stations along the route, saving time and resources while ensuring consistent accuracy over large distance.

CHAPTER THREE

3.0 METHODOLOGY

This can be termed as a set of methods and principles used to perform a particular activity. For the activities to be successfully performed, proper planning is very important. This involves development of a work plan showing how goals and objectives are to be accomplished. Hence, planning is one of the essential factors for the effective project execution and management. Proper planning was taken for the execution of this project and this involved;

1. The choice of the most appropriate techniques for carry out of the project
2. Selection of equipment used
3. The design of a monitoring scheme that really helped in achieving the required accuracy for the project, starting from reconnaissance to the final product of the project.

3.1 RECONNAISSANCE

This is an important and first aspect in any survey project carried out to obtain the general view of the study area in terms of the nature of the terrain and to adequately plan the best ways to the set aim and objectives of the project. The importance of reconnaissance to any survey work of any size and nature cannot be over-emphasized. Experience has proved that time spent in carrying out a good reconnaissance is not a wasted time since it contributes to the quick execution of

any survey exercise and promotes easy survey work. Reconnaissance simply connotes the summation of all activities preceding the actual execution of a survey job. It involves taking a general study or view of an area of operation with a view of knowing how best the operation is to be carried out in terms of energy and time. As this project was concerned, the reconnaissance was carried out in two stages.

The two stages of reconnaissance are;

- i. Office planning
- ii. Field planning

3.1.1 OFFICE PLANNING

Office planning is also known as office reconnaissance. It is a vital component of route surveying, enabling surveyors to gather existing data and information before conducting fieldwork. This process involves a thorough review of available resources, including maps, aerial imagery, and existing reports.

3.1.2. FIELD PLANNING

The field reconnaissance was first carried out before the actual operation. This aspect involved site visitation to the project site by all the group members to have

a pre-requisite knowledge of how it looks and how the field operation will be carried out.

During the visit, the control points planned to be used were marked, the reconnaissance facilitated the planning and carrying out of the actual survey as it was taking into consideration, the possible problem that are likely to be encountered, how such problems can be overcome or reduced to the barest minimum.

3.2 FIELD PREPARATION

This involved the operation carried out before the actual observation. The operation involved marking of chainages which is done at 25cm interval.

3.3. MOMENTATION

Temporary bench mark (TBM) were established and coordinated along the entire route of the project, which were meant to serve as controls for establishing Centerline chainage, setting out of curve and other road features during the actual construction.

The position of these beacons were selected in such a way that they are intervisible to each other, not too far from the proposed road and considerable number of Centerline can be set out from them.

The property beacon used were precast with dimensions 18cm square by 75cm in length. 65cm of the precast beacon was buried beneath the surface and 10cm above. This was done in compliance with the specification of cadastral survey regulations as specified in CAP 425 law of the federation of Nigeria. The property beacon was made of concrete mixture of ratio 3:2:1 of sand, granite and cement. The iron rod protruding at the center of the beacon formed the station mark.

The numbering was done serially from the beginning to the end of the proposed road and were prefixed with the identification number KP ND11 001

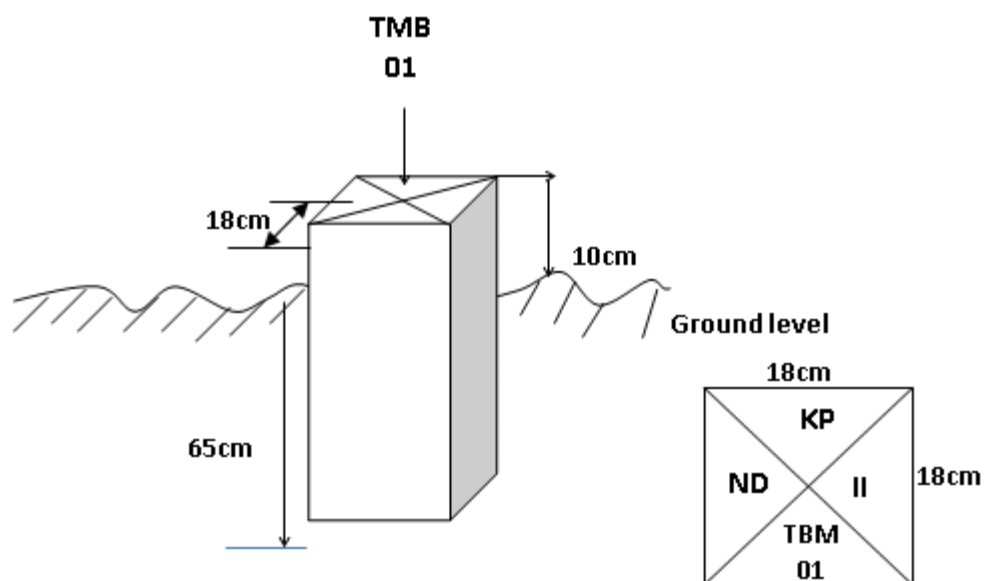


Fig. 3.0 Showing typical survey beacon

3.4. EQUIPMENT USED

3.4.1 HARDWARE USED

- i. Differential GPS
- ii. Handheld GPS
- iii. Linen tape
- iv. Power supplies
- v. Nails and bottles cork
- vi. Hammer
- vii. Cabling and connectors

3.4. 11. SOFTWARE USED

- i. AutoCAD/ CivilCAD 2014
- ii. Microsoft office (word and excel)
- iii. Notepad

3.5. METHOD USED

CORS TECHNOLOGY

CORS stands for (Continuously Operating Reference Station). It is a type of GPS or GNSS (Global Navigation Satellite System) station that:

1. Collects and transmits GPS/GNSS data continuously.

2. Provides real-time corrections to improve the accuracy of GPS signals.

CORS are used to enhance the precision and reliability of GPS positioning for various applications, including surveying, mapping, navigation, and more.

How you use a CORS with a data logger when collecting survey data:

How to Use a CORS with a Data Logger

1. Set Up Your GNSS Receiver & Data Logger

- Mount the GNSS antenna securely on your survey pole or tripod.
- Connect your data logger/controller to the GNSS receiver. The data logger is usually a handheld device or tablet used to configure settings and record data.

2. Configure the CORS Connection

- On the data logger, enter the CORS network settings:
- Enter the username
- IP address & port of the CORS provider.
- You'll need mobile internet (, hotspot) on your data logger or receiver to access the CORS network in real time.

3. Select Correction Service Type

- Choose RTK corrections (Real-Time Kinematic) if you want live centimeter-level accuracy.
- Some systems also allow post-processing (PPK), where you log raw data and apply CORS corrections later.

4. Start Receiving Corrections

- Once connected, the GNSS receiver will start applying correction data from the CORS.
- The data logger will show “Fixed RTK” or “Float RTK” status, indicating correction quality.

5. Begin Surveying & Logging Points

- Move to the points you want to survey.
- Use the data logger to record positions, adding descriptions, codes, or attributes as needed.
- Each recorded point will have high-precision coordinates

6. Save & Export Data

- After collecting your points, you can export the data (CSV, DXF, shapefiles, etc.) from the data logger for further use in GIS, CAD, or mapping software.

In Simple Terms:

The CORS sends corrections to your rover via the internet. Your data logger controls the receiver and records corrected point data.

CHAPTER FOUR

4.0 DATA PROCESSING AND RESULT ANALYSIS

This stage involves downloading of the acquired data on field from the digital equipment to the personal computer for further processing. The data obtained were downloaded using a data transfer cable. After successfully downloaded of those data, they were edited using Microsoft Excel and Notepad Software which made it possible to easily import the edited copy into AutoCAD for drafting and designing. The coordinate obtained were in X, Y, Z format which were used for plotting the route's longitudinal profile

4.1. DATA DOWNLOADING

1. The instrument was connected to the personal computer via downloading cable, the corresponding software was launched and the instrument port was selected.
2. All the folders on the instrument were displayed. The folder containing the data for the group was then copied and pasted on another folder already created on the local drive of the personal computer.
3. The folder was launched and the file containing the data was opened with notepad application.

4. The results were in the format; Point ID, Easting, Northings and Height.

The downloaded data were edited in Notepad, Microsoft Excel and scripts were prepared in Notepad in order to be plotted in AutoCAD.

4.2 DATA PROCESSING

Data processing is a critical component of route surveys, enabling the transformation of raw data into usable information for design, analysis, and decision-making. Route surveys involve collecting vast amounts of data, including topographic information, environmental factors, and infrastructure details.

The data processing stage involves several key steps, including data cleaning, transformation, analysis, and visualization. Data cleaning removes errors, inconsistencies, and outliers, ensuring the accuracy and reliability of the data. Data transformation converts the data into suitable formats, while data analysis applies algorithm

The downloaded data from the equipment was further edited using Microsoft Excel and Notepad, the final edited copy was saved as text file containing X, Y, Z coordinates of all points observed in the field.

4.3 RESULT ANALYSIS

The results were analyzed so as to check the accuracy of the job by comparing the result obtained with the minimum allowable error acceptable for this order of survey job in accordance with survey rules and departmental instructions.

4.3.1 LONGITUDINAL /HORIZONTAL ALIGNMENT PROFILE

1. In CivilCAD environment, Road menu was clicked and HORIZONTAL ALIGNMENT chosen
2. Options button was clicked in the appeared dialogue box and Define section was then clicked to choose the section format and the distance between the sections. Format 2 was chosen and the distance between sections was taken to be 25m.
3. Having chosen these options, OK was clicked twice.
4. Pick tool was selected from the right pane dialogue box to pick the intersection points (IP), and appropriate radius values of curve was given to each IP as specified by the client.
5. Apply button was then clicked to effect all the given parameters on the drawing. On each IP position, information about the IP is been displayed. Such information are; IP number ,X coordinate, Y coordinate, Radius of Curve, Length of curve, Deflection angle and so on.

4.4 INFORMATION PRESENTATION/ PLAN PRODUCTION

The data acquired were processed into plan for visual presentation with AutoCAD CivilCAD. The visual display graphical information in AutoCAD was printed as hardcopy of the plan. The longitudinal section and profile were plotted.

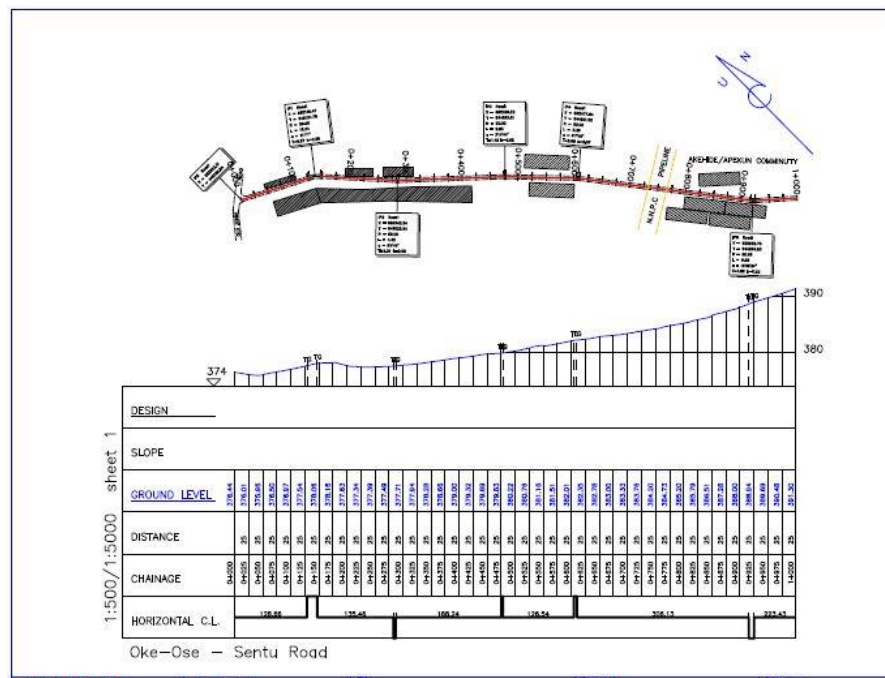


Fig. 4.0 showing the Profile and Longitudinal Section from Chainage 0+000 – 1+000

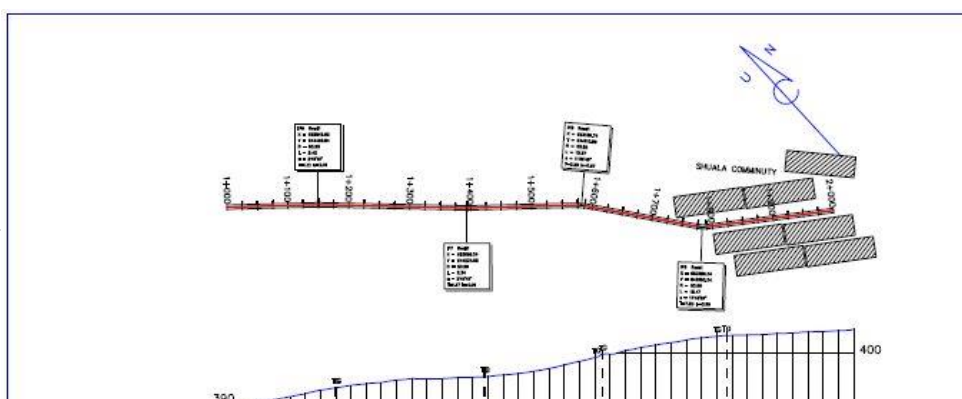


Fig. 4.1 showing the Profile and Longitudinal Section from Chainage 1+000 – 2+000

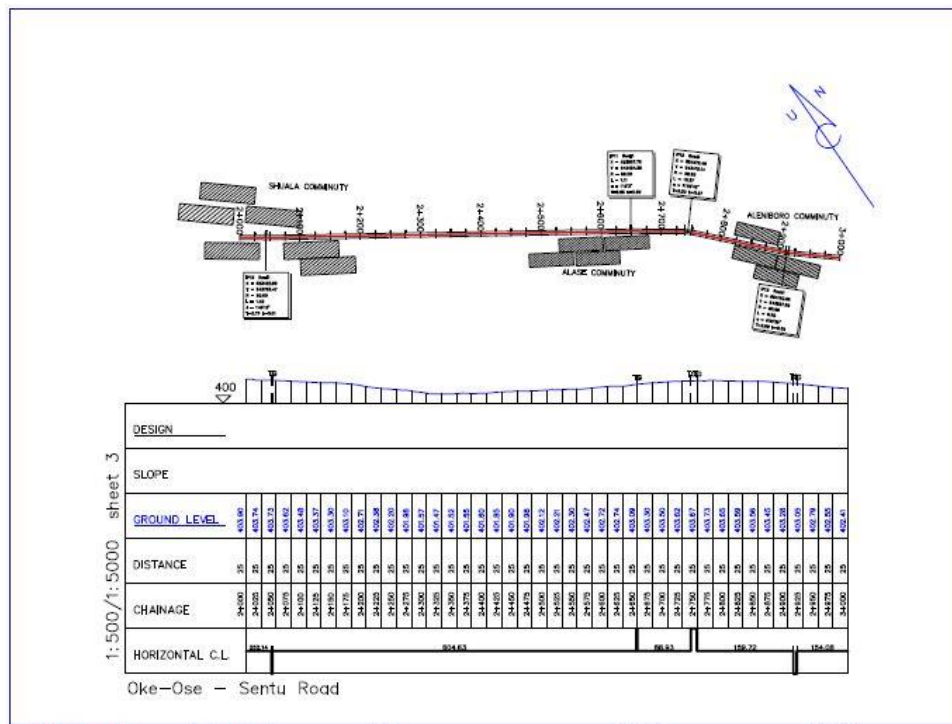


Fig. 4.2 showing the Profile and Longitudinal Section from Chainage 2+000 – 3+000

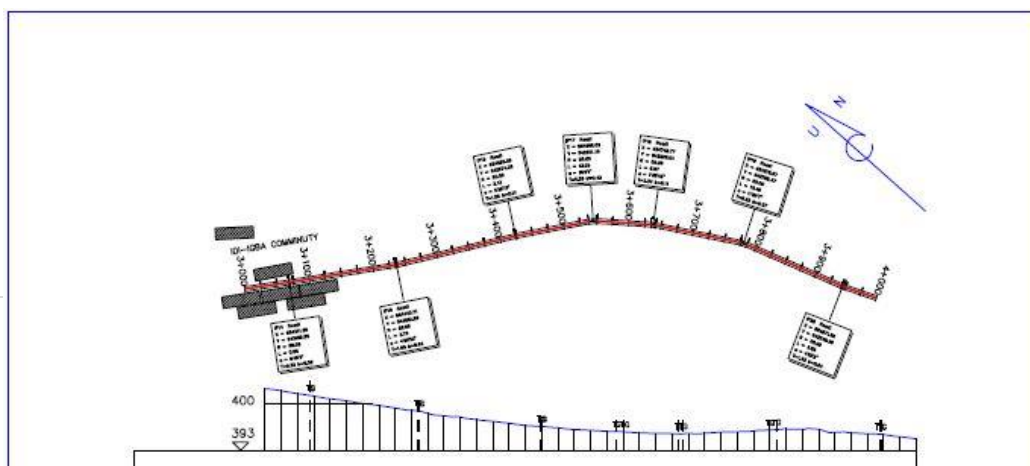


Fig. 4.3 showing the Profile and Longitudinal Section from Chainage 3+000 – 4+000

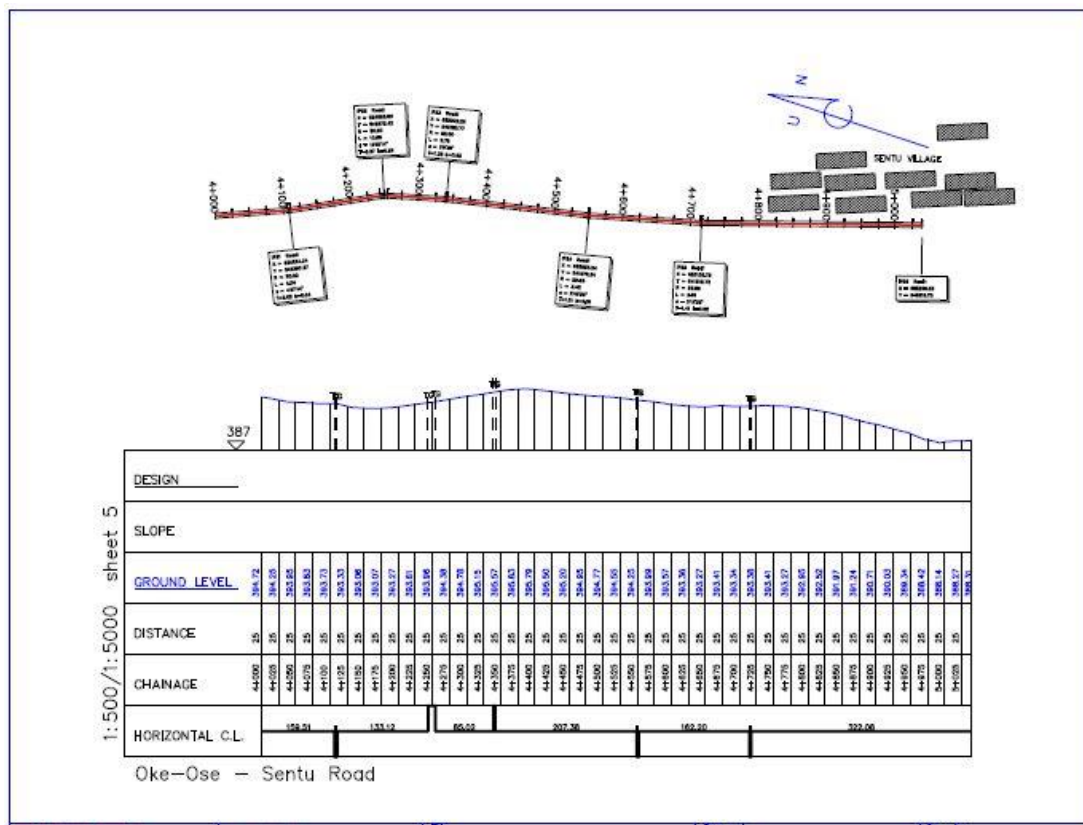


Fig. 4.4 showing the Profile and Longitudinal Section from Chainage 4+000 – 5+025

5.0 SUMMARY, PROBLEM ENCOUNTERED, CONCLUSION AND RECOMMENDATIONS

5.1 SUMMARY

The aim and purpose of this project was to carry out route survey of Oke-Ose - Sentu Road, off Old Jebba road Ilorin East. We started with reconnaissance which involved Office Planning and Field Planning. Reconnaissance entails total planning and usually visitation to study area to get familiarize to the site. The instrument used was examined to make sure that it is in good working condition. The raw data obtained from the field work were downloaded into a computer system using downloading cable and later process using software (CivilCAD). The processed data were used for the production of digital plan using a suitable scale in order to appreciate the work done so far and to make the work understandable to others.

5.2 PROBLEM ENCOUNTERED

The following problem were encountered when project is going on

- ❖ The movement of the masses and vehicle from one place to another along the selected road for the project was a great problem which had an effect on the rate at which the operation was carried out.
- ❖ There's poor mobile network coverage in some areas
- ❖ There's no instrument to be used from the department, we need to rent instruments outside in order to execute our project

- ❖ Accuracy decrease distance from the CORS station. Interference from vegetation or buildings which also affect signal quality.

5.3 SOLUTION TO THE PROBLEMS

Optimize station placement: Choose CORS stations that are strategically located for optimal coverage and accuracy in your survey area.

Use higher-quality receivers: Employ survey-grade GPS receivers that are more robust to interference and capable of maintaining high accuracy. Implement error detection and correction techniques: Utilize post-processing techniques or real-time kinematic (RTK) methods to minimize errors.

5.5 RECOMMENDATION

Using CORS in route surveys offers significant advantages in terms of accuracy, efficiency, and cost-effectiveness. By leveraging this technology, surveyors can achieve higher quality results while reducing project timelines and expenses.

5.4 CONCLUSION

The goal of this project was successfully achieved in which all operation was carried out in accordance to survey rules and regulation and high data

integrity was ensured. Moreover, this project has broadened my knowledge in carrying out route survey within an area and a good background in surveying operation. CORS systems are a valuable tool for route surveys, providing accurate, reliable, and efficient positioning solutions. With their ability to deliver centimeter-level accuracy and streamline survey workflows, CORS systems are becoming increasingly important for a wide range of surveying and mapping applications. The survey plan of selected location (GT Junction to Sentu Junior School) was finally produced showing the alignments and levels.

REFERENCES

California Department of Transportation, (CalTrans). Chapter 6 Global Positioning System (GPS) Survey Specifications. Surveys Manual.

http://www.dot.ca.gov/hq/row/landsurveys/SurveysManual/Manual_TOC.html .

Colorado Department of Transportation, (CDOT). Chapter 3 GPS/GNSS Surveys. Survey Manual.

http://www.dot.state.co.us/Survey_Manual/ .

Davis, Raymond E., Francis S. Foote, James M. Anderson, and Edward M. Mikhail, Surveying: Theory and Practice, Sixth Edition. McGraw-Hill, 1981.

Garmin Corporation. GPS Guide for beginners. About GPS.

<http://www.garmin.com/aboutGPS> .

Kavanagh, Barry F. and S. J. Glenn Bird, Surveying: Principles and Applications, Third Edition. Englewood Cliffs, New Jersey: Prentice-Hall, Inc., 1992.

Meyer, Carl F. and David W. Gibson, Route Surveying and Design, Fifth Edition. New York: HarperCollins College Publishers, Inc., 1980.

Minnesota Department of Transportation, (MnDOT). Chapter 2 - Geodetic Surveys. Surveying and Mapping Manual.

http://www.olmweb.dot.state.mn.us/manual/SM_Manual.pdf .

National Oceanic and Atmospheric Agency, (NOAA) Welcome to Geodesy.

NOAA national ocean service education.

<http://www.oceanservice.noaa.gov/education/kits/geodesy/welcome.html> .

Texas Department of Transportation (TxDOT). Section 3: Introduction to Surveys. TxDOT Survey Manual.

<http://onlinemanuals.txdot.gov/txdotmanuals/ess/index.htm> .

Trimble Navigation, Ltd. GPS Tutorial. All about GPS.

<http://www.trimble.com/gps/index.shtml> .

United States Naval Operations, (USNO). NAVSTAR Global Positioning System. Navstar GPS Operations.

<http://tycho.usno.navy.mil/gpsinfo.html> .

Wolf, Paul R. and Russell C. Brinker, Elementary Surveying, Ninth Edition.

New York: HarperCollins College Publishers, 1994.

Wyoming Department of Transportation (WYDOT). Traffic Control for Roadway Work Operations, November 2011.

Revised Ma.

APENDIX

	X	Y	Z
Base_0	937113.1383	671374.3384	290.1564
PT1	945199.3114	682040.6186	376.7882
PT2	945213.5827	682040.105	376.9413
PT3	945211.4969	682003.731	375.523
PT4	945195.8081	682006.6873	375.3559
PT5	945196.7212	682015.1343	376.0015
PT6	945195.2796	682015.2914	375.6575
PT7	945198.1178	682029.9284	376.6706
PT8	945196.9524	682029.9872	376.6791
TBM	945198.2609	682030.3286	376.5831
PT9	945196.8401	682023.3089	376.4395
TBM2	945195.4667	682015.9708	376.149
PT10	945180.9251	682042.1781	375.4776
PT11	945189.1348	682045.8814	376.1932
PT12	945185.7517	682044.051	375.9832
PT13	945169.6109	682068.3965	375.8128
PT14	945173.2661	682070.4497	376.1018
PT15	945177.4268	682070.1981	376.1243
PT16	945164.7499	682102.3475	377.128
PT17	945158.4899	682099.5777	376.68
PT18	945154.5633	682097.6234	376.4599
PT19	945140.1152	682122.3306	376.9666
PT20	945144.5944	682125.6551	377.2596
PT21	945148.1957	682127.8816	377.3442
PT22	945120.7209	682147.4167	377.4701
PT23	945124.2079	682150.8356	378.0427
PT24	945125.9043	682152.3729	378.0537
PT25	945098.5267	682168.5375	378.0107
PT26	945101.5002	682173.0851	378.1797
PT27	945105.2318	682176.5175	378.1743
PT28	945081.013	682188.1427	377.3532
PT29	945075.531	682192.4098	377.1792
PT30	945070.2634	682187.8348	376.6787
PT31	945073.3156	682183.8423	376.4857
PT32	945080.8774	682194.6302	377.4948
PT33	945085.8588	682197.4173	377.5604
PT34	945063.1386	682219.9257	377.4999
PT35	945058.0674	682215.4796	377.3388
PT36	945052.8936	682210.7118	377.3088
PT37	945031.9359	682232.7354	377.3118
PT38	945036.0137	682236.942	377.4859

PT39 [945040.8645](#) [682242.186](#) [377.962](#)
PT40 [945019.4543](#) [682262.1929](#) [377.834](#)
PT41 [945015.1585](#) [682258.3375](#) [377.7304](#)
PT42 [945010.9548](#) [682255.545](#) [377.7909](#)
PT43 [944991.5477](#) [682273.7819](#) [377.8099](#)
PT44 [944994.356](#) [682278.6763](#) [377.9765](#)
PT45 [944998.563](#) [682283.275](#) [378.3025](#)
PT46 [944979.1704](#) [682305.5106](#) [378.9486](#)
PT47 [944974.4594](#) [682300.9196](#) [378.4325](#)
PT48 [944970.2348](#) [682296.8032](#) [378.4865](#)
PT49 [944949.0887](#) [682317.9409](#) [378.8185](#)
PT50 [944953.3104](#) [682323.2021](#) [378.8761](#)
PT51 [944958.2647](#) [682328.3961](#) [379.2777](#)
PT52 [944942.5402](#) [682346.5093](#) [379.5567](#)
PT53 [944939.1591](#) [682351.5735](#) [379.7302](#)
PT54 [944949.0258](#) [682356.25](#) [379.9093](#)
PT55 [944952.428](#) [682352.8633](#) [379.9308](#)
PT56 [944934.6374](#) [682344.2476](#) [379.2306](#)
PT57 [944928.6085](#) [682339.6375](#) [379.1981](#)
PT58 [944909.6407](#) [682361.3338](#) [379.4121](#)
PT59 [944915.2877](#) [682366.2067](#) [379.7087](#)
PT60 [944918.9539](#) [682370.1494](#) [380.1443](#)
PT61 [944899.9699](#) [682390.6316](#) [380.2548](#)
PT62 [944895.8093](#) [682386.2215](#) [379.8353](#)
PT63 [944891.7868](#) [682382.7897](#) [379.7662](#)
PT64 [944872.133](#) [682400.2562](#) [380.2427](#)
PT65 [944876.4024](#) [682405.0642](#) [380.2813](#)
PT66 [944879.6438](#) [682408.1844](#) [380.6578](#)
PT67 [944862.5786](#) [682424.9433](#) [380.9054](#)
PT68 [944858.8558](#) [682421.764](#) [380.8158](#)
PT69 [944855.1193](#) [682417.8594](#) [380.8773](#)
PT70 [944851.3951](#) [682421.7055](#) [381.0128](#)
PT71 [944843.4494](#) [682416.4083](#) [380.5042](#)
PT72 [944848.8235](#) [682411.7505](#) [380.4407](#)
PT73 [944836.2365](#) [682437.8065](#) [381.1378](#)
PT74 [944835.3606](#) [682436.9188](#) [381.2068](#)
PT75 [944839.0823](#) [682440.5946](#) [381.1278](#)
PT76 [944843.071](#) [682444.7108](#) [381.3639](#)
PT77 [944817.2999](#) [682455.6408](#) [381.5858](#)
PT78 [944816.1413](#) [682454.6443](#) [381.7118](#)
PT79 [944820.7132](#) [682459.379](#) [381.6384](#)
PT80 [944824.2858](#) [682463.1057](#) [381.8139](#)
PT81 [944805.9786](#) [682480.9265](#) [382.633](#)
PT82 [944797.8519](#) [682472.8444](#) [382.1354](#)
PT83 [944801.9151](#) [682477.042](#) [382.1574](#)

PT84 [944785.8843](#) [682496.8628](#) [382.6775](#)
PT85 [944778.7971](#) [682489.8941](#) [382.4644](#)
PT86 [944782.6037](#) [682493.5032](#) [382.4369](#)
PT87 [944764.9487](#) [682512.9877](#) [382.8735](#)
PT88 [944762.1142](#) [682509.7504](#) [382.9524](#)
PT89 [944758.6471](#) [682506.251](#) [382.7369](#)
PT90 [944737.3885](#) [682520.9878](#) [383.1014](#)
PT91 [944740.6352](#) [682526.4818](#) [383.1414](#)
PT92 [944744.8003](#) [682530.9879](#) [383.4055](#)
PT93 [944721.6466](#) [682544.3687](#) [383.583](#)
PT94 [944718.307](#) [682540.8965](#) [383.5089](#)
PT95 [944715.2019](#) [682536.7187](#) [383.4319](#)
PT96 [944694.2515](#) [682552.6245](#) [383.8999](#)
PT97 [944687.6985](#) [682545.1268](#) [383.3217](#)
PT98 [944678.5436](#) [682553.9469](#) [383.4058](#)
PT99 [944684.7094](#) [682563.6639](#) [384.1829](#)
PT100 [944691.3984](#) [682573.759](#) [384.36](#)
PT101 [944702.8429](#) [682568.3649](#) [384.2641](#)
PT102 [944705.3511](#) [682578.7386](#) [384.5537](#)
PT103 [944698.9057](#) [682584.3335](#) [384.4892](#)
PL [944699.6504](#) [682541.8913](#) [383.8583](#)
PL1 [944671.6554](#) [682562.8775](#) [384.1068](#)
PT104 [944679.0284](#) [682577.9201](#) [384.475](#)
PT105 [944676.2368](#) [682575.2157](#) [384.6084](#)
PT106 [944671.7481](#) [682571.3798](#) [384.1429](#)
PT107 [944654.0523](#) [682586.8592](#) [384.8209](#)
PT108 [944657.6578](#) [682590.8217](#) [385.0929](#)
PT109 [944660.9572](#) [682594.7802](#) [384.9365](#)
PT110 [944640.3038](#) [682610.2004](#) [385.5405](#)
PT111 [944637.8014](#) [682607.0038](#) [385.5779](#)
PT112 [944633.7707](#) [682603.0641](#) [385.6409](#)
PT113 [944614.0203](#) [682619.1606](#) [386.2424](#)
PT114 [944612.7415](#) [682618.6438](#) [386.0484](#)
PT115 [944616.4636](#) [682623.3105](#) [386.1459](#)
PT116 [944619.5163](#) [682626.8921](#) [386.2865](#)
PT117 [944598.8923](#) [682640.3068](#) [386.9915](#)
PT118 [944592.8678](#) [682633.8957](#) [387.0579](#)
PT119 [944598.5174](#) [682628.3665](#) [386.9764](#)
PT120 [944586.2129](#) [682627.0857](#) [387.1628](#)
PT121 [944584.8091](#) [682632.0174](#) [387.3333](#)
PT122 [944575.0042](#) [682630.7478](#) [387.2937](#)
PT123 [944575.1158](#) [682626.5253](#) [387.2332](#)
PT124 [944573.1301](#) [682649.1467](#) [387.7229](#)
PT125 [944575.6833](#) [682653.2244](#) [387.7684](#)
PT126 [944578.8877](#) [682658.1919](#) [387.681](#)

[PT127 944558.3109 682672.7449 388.857](#)
[PT128 944554.5026 682669.7494 388.8159](#)
[PT129 944550.8226 682667.5823 388.7539](#)
[PT130 944535.2925 682684.2145 389.5004](#)
[PT131 944537.9486 682687.9682 389.5585](#)
[PT132 944540.5904 682690.9152 389.5255](#)
 Akehinde Apekun Community [944577.7487 682638.5626 387.7788](#)
 Akehinde Apekun Community1 [944518.9278 682702.5787 390.1885](#)
[PT133 944522.512 682705.9537 390.2825](#)
[PT134 944525.3673 682708.1358 390.3206](#)
[PT135 944509.9047 682727.933 391.0931](#)
[PT136 944505.7564 682725.3564 391.1421](#)
[PT137 944501.5483 682723.0234 391.112](#)
[PT138 944486.1684 682741.5894 391.9906](#)
[PT139 944488.9333 682744.4642 391.8936](#)
[PT140 944492.0266 682747.0664 391.7972](#)
[PT141 944476.5158 682767.1762 392.2418](#)
[PT142 944472.6524 682764.9786 392.3517](#)
[PT143 944468.2373 682762.0183 392.3047](#)
[PT144 944451.4469 682782.1881 392.9462](#)
[PT145 944454.9564 682785.0693 392.8338](#)
[PT146 944458.6709 682787.7737 393.0683](#)
[PT147 944441.4925 682807.8717 393.1609](#)
[PT148 944438.5865 682804.8925 393.3268](#)
[PT149 944433.5528 682800.9692 393.3697](#)
 TBM4 [944424.8384 682795.8702 393.9601](#)
 TBM5 [944435.8443 682821.7079 393.8164](#)
[PT150 944424.5339 682828.4869 393.5674](#)
[PT151 944419.91 682824.7327 393.9648](#)
[PT152 944415.5249 682820.8982 393.9723](#)
[PT153 944399.8947 682839.0127 394.2888](#)
[PT154 944403.6364 682842.6181 394.3559](#)
[PT155 944409.9349 682847.5503 394.176](#)
[PT156 944390.0334 682864.4568 394.4079](#)
[PT157 944385.6411 682860.6606 394.7839](#)
[PT158 944380.5788 682856.8006 394.8008](#)
[PT159 944364.9122 682872.9292 395.0643](#)
[PT160 944368.8609 682876.5834 395.0744](#)
[PT161 944373.8897 682881.5008 394.702](#)
[PT162 944354.7932 682897.5831 395.1435](#)
[PT163 944350.8946 682892.8932 395.2114](#)
[PT164 944347.3718 682889.0943 395.5428](#)
[PT165 944330.1423 682906.4336 395.8108](#)
[PT166 944334.2528 682912.0563 395.6854](#)
[PT167 944338.651 682916.5651 395.3885](#)

[PT168](#) [944320.7572](#) [682934.996](#) [395.728](#)
[PT169](#) [944315.8876](#) [682930.2666](#) [395.9204](#)
[PT170](#) [944311.2537](#) [682926.1208](#) [395.8679](#)
[PT171](#) [944296.0571](#) [682942.1032](#) [395.8444](#)
[PT172](#) [944299.5474](#) [682946.17](#) [395.8974](#)
[PT173](#) [944304.0639](#) [682951.5088](#) [395.673](#)
[PT174](#) [944289.0102](#) [682967.9022](#) [395.7765](#)
[PT175](#) [944283.337](#) [682964.4747](#) [395.8435](#)
[PT176](#) [944276.9644](#) [682958.6182](#) [395.9109](#)
[PT177](#) [944262.475](#) [682977.1212](#) [396.1149](#)
[PT178](#) [944267.6727](#) [682981.617](#) [396.042](#)
[PT179](#) [944273.4362](#) [682986.2812](#) [395.8726](#)
[PT180](#) [944255.4](#) [683004.6533](#) [396.0681](#)
[PT181](#) [944250.0544](#) [683000.1114](#) [396.048](#)
[PT182](#) [944245.0969](#) [682995.7019](#) [396.0924](#)
[PT183](#) [944230.6346](#) [683014.1895](#) [396.131](#)
[PT184](#) [944234.6483](#) [683018.3367](#) [396.144](#)
[PT185](#) [944237.8763](#) [683022.113](#) [396.0736](#)
[PT186](#) [944223.3704](#) [683038.9967](#) [396.3541](#)
[PT187](#) [944218.9587](#) [683035.5434](#) [396.4091](#)
[PT188](#) [944214.7573](#) [683032.734](#) [396.3505](#)
[PT189](#) [944199.5267](#) [683049.0531](#) [396.6295](#)
[PT190](#) [944203.8842](#) [683052.691](#) [396.5721](#)
[PT191](#) [944207.8756](#) [683056.3423](#) [396.4497](#)
[PT192](#) [944191.8216](#) [683073.5485](#) [396.8382](#)
[PT193](#) [944186.1372](#) [683070.4153](#) [396.9311](#)
[PT194](#) [944182.9267](#) [683067.975](#) [396.9721](#)
[PT195](#) [944169.0942](#) [683086.7656](#) [397.4131](#)
[PT196](#) [944171.7168](#) [683089.8515](#) [397.2822](#)
[PT197](#) [944174.6798](#) [683092.6625](#) [397.2282](#)
[PT198](#) [944160.0731](#) [683110.5351](#) [397.8203](#)
[PT199](#) [944157.1557](#) [683108.491](#) [397.7892](#)
[PT200](#) [944153.0563](#) [683104.5289](#) [397.7321](#)
[PT201](#) [944137.1448](#) [683123.8695](#) [398.4182](#)
[PT202](#) [944140.4637](#) [683127.2493](#) [398.4042](#)
[PT203](#) [944143.2904](#) [683129.7386](#) [398.3403](#)
[PT204](#) [944127.5054](#) [683147.2446](#) [398.7463](#)
[PT205](#) [944124.6053](#) [683144.5247](#) [398.9343](#)
[PT206](#) [944121.7316](#) [683141.9843](#) [399.0392](#)
[PT207](#) [944105.6673](#) [683158.5832](#) [400.0922](#)
[PT208](#) [944110.8499](#) [683159.7396](#) [399.4933](#)
[PT209](#) [944106.7462](#) [683155.5569](#) [399.5002](#)
[PT210](#) [944113.3668](#) [683164.4484](#) [399.2974](#)
[PT211](#) [944098.7418](#) [683178.0605](#) [399.5654](#)
[PT212](#) [944095.0484](#) [683174.6723](#) [399.7783](#)

[PT213](#) [944091.5274](#) [683171.6301](#) [399.8762](#)
[PT214](#) [944074.9079](#) [683183.6782](#) [400.4902](#)
[PT215](#) [944077.7728](#) [683189.2614](#) [400.3653](#)
[PT216](#) [944080.865](#) [683193.482](#) [400.1593](#)
[PT217](#) [944063.6186](#) [683204.0268](#) [400.6243](#)
[PT218](#) [944061.2017](#) [683200.1972](#) [400.8602](#)
[PT219](#) [944058.1635](#) [683196.6145](#) [400.8792](#)
[PT220](#) [944040.3841](#) [683210.2302](#) [401.2952](#)
[PT221](#) [944042.9584](#) [683214.5465](#) [401.1792](#)
[PT222](#) [944045.4711](#) [683218.2193](#) [401.4213](#)
[PT223](#) [944028.6562](#) [683229.0962](#) [401.7632](#)
[PT224](#) [944025.9486](#) [683225.3792](#) [401.5782](#)
[PT225](#) [944023.6204](#) [683222.9664](#) [401.6441](#)
[PT226](#) [944005.4506](#) [683234.8729](#) [402.0471](#)
[PT227](#) [944007.5753](#) [683238.4222](#) [401.8831](#)
[PT228](#) [944009.8044](#) [683241.7863](#) [402.0652](#)
[PT229](#) [943990.7831](#) [683255.2935](#) [402.3592](#)
[PT230](#) [943987.4627](#) [683250.8742](#) [402.3871](#)
[PT231](#) [943985.1048](#) [683247.295](#) [402.353](#)
[PT232](#) [943965.4637](#) [683261.1936](#) [402.636](#)
[PT233](#) [943968.1904](#) [683265.0817](#) [402.6051](#)
[PT234](#) [943971.0972](#) [683267.7621](#) [402.6341](#)
[PT235](#) [943953.8996](#) [683283.3009](#) [402.9241](#)
[PT236](#) [943950.3365](#) [683280.3363](#) [402.867](#)
[PT237](#) [943946.2352](#) [683276.6171](#) [402.855](#)
[PT238](#) [943929.9536](#) [683293.6457](#) [403.034](#)
[PT239](#) [943937.8304](#) [683302.2593](#) [402.9241](#)
[PT240](#) [943934.514](#) [683298.6699](#) [402.9391](#)
[PT241](#) [943922.8932](#) [683319.2215](#) [403.0002](#)
[PT242](#) [943918.8086](#) [683316.3905](#) [403.1341](#)
[PT243](#) [943914.3148](#) [683313.4628](#) [403.171](#)
[PT244](#) [943900.179](#) [683331.0373](#) [403.3321](#)
[PT245](#) [943905.3067](#) [683335.1927](#) [403.3572](#)
[PT246](#) [943909.6235](#) [683338.223](#) [403.0542](#)
[PT247](#) [943896.4659](#) [683357.2362](#) [403.2603](#)
[PT248](#) [943892.0357](#) [683354.953](#) [403.4442](#)
[PT249](#) [943886.5214](#) [683352.4671](#) [403.4612](#)
[PT250](#) [943874.8779](#) [683368.9015](#) [403.4962](#)
[PT251](#) [943880.5385](#) [683372.5791](#) [403.4413](#)
[PT252](#) [943885.0605](#) [683375.6579](#) [403.2514](#)
[PT253](#) [943875.3673](#) [683394.5764](#) [403.4564](#)
[PT254](#) [943868.9648](#) [683391.2871](#) [403.5534](#)
[PT255](#) [943861.8852](#) [683387.7037](#) [403.7203](#)
[PT256](#) [943850.8609](#) [683406.4958](#) [403.4833](#)
[PT257](#) [943855.2308](#) [683410.6436](#) [403.6394](#)

[PT258](#) [943859.3855](#) [683413.5265](#) [403.4705](#)
[PT259](#) [943844.9737](#) [683434.5501](#) [403.5495](#)
[PT260](#) [943841.1023](#) [683433.1524](#) [403.7225](#)
[PT261](#) [943834.3642](#) [683432.3214](#) [403.7144](#)
[PT262](#) [943823.183](#) [683448.8343](#) [403.5955](#)
[PT263](#) [943827.2737](#) [683452.3623](#) [403.7766](#)
[PT264](#) [943831.4921](#) [683456.157](#) [403.7476](#)
[PT265](#) [943817.9918](#) [683475.5354](#) [403.5397](#)
[PT266](#) [943814.3035](#) [683472.6244](#) [403.7506](#)
[PT267](#) [943809.1225](#) [683469.6297](#) [403.6386](#)
SUHALLAH COMMUNITY [943829.481](#) [683463.1783](#) [404.2717](#)
[PT268](#) [943804.4166](#) [683495.6186](#) [403.6028](#)
[PT269](#) [943799.4687](#) [683492.9631](#) [403.7517](#)
[PT270](#) [943794.4072](#) [683489.7633](#) [403.5156](#)
TBM6 [943829.3836](#) [683463.0762](#) [404.2497](#)
[PT271](#) [943791.0514](#) [683515.3372](#) [403.5258](#)
[PT272](#) [943786.5187](#) [683512.0104](#) [403.6738](#)
[PT273](#) [943781.4725](#) [683509.0118](#) [403.4507](#)
[PT274](#) [943777.2541](#) [683535.9976](#) [403.4439](#)
[PT275](#) [943772.1052](#) [683532.8207](#) [403.5268](#)
[PT276](#) [943768.2587](#) [683529.0816](#) [403.3418](#)
[PT277](#) [943755.0748](#) [683548.2157](#) [403.3119](#)
[PT278](#) [943759.3507](#) [683551.8494](#) [403.3889](#)
[PT279](#) [943763.8397](#) [683554.9315](#) [403.425](#)
[PT280](#) [943749.7653](#) [683573.0347](#) [403.3001](#)
[PT281](#) [943745.271](#) [683570.4858](#) [403.414](#)
[PT282](#) [943740.1523](#) [683568.8621](#) [403.22](#)
[PT283](#) [943727.6808](#) [683587.6425](#) [402.9841](#)
[PT284](#) [943731.9205](#) [683591.4747](#) [403.2912](#)
[PT285](#) [943736.1783](#) [683594.4941](#) [403.1083](#)
[PT286](#) [943723.4934](#) [683614.3082](#) [402.8764](#)
[PT287](#) [943718.4779](#) [683611.8637](#) [403.0073](#)
[PT288](#) [943713.2266](#) [683608.8016](#) [402.8282](#)
[PT289](#) [943701.6335](#) [683626.9821](#) [402.5364](#)
[PT290](#) [943706.2285](#) [683630.6362](#) [402.6514](#)
[PT291](#) [943709.9184](#) [683633.2764](#) [402.3815](#)
[PT292](#) [943698.0619](#) [683652.7842](#) [402.3056](#)
[PT293](#) [943693.6244](#) [683650.2864](#) [402.3576](#)
[PT294](#) [943688.5442](#) [683647.2386](#) [401.9605](#)
[PT295](#) [943675.0413](#) [683666.9249](#) [402.0186](#)
[PT296](#) [943680.3053](#) [683670.3264](#) [402.1567](#)
[PT297](#) [943684.1414](#) [683672.7573](#) [402.0927](#)
[PT298](#) [943661.1149](#) [683686.9242](#) [401.5427](#)
[PT299](#) [943665.9813](#) [683689.6694](#) [402.0488](#)
[PT300](#) [943669.9193](#) [683693.0341](#) [401.6279](#)

[PT301](#) [943656.8344](#) [683711.6912](#) [401.458](#)
[PT302](#) [943652.5036](#) [683710.3803](#) [401.4469](#)
[PT303](#) [943645.8779](#) [683707.3704](#) [401.3538](#)
[PT304](#) [943635.6962](#) [683726.8128](#) [401.412](#)
[PT305](#) [943638.6026](#) [683728.796](#) [401.502](#)
[PT306](#) [943642.6387](#) [683732.4744](#) [401.4641](#)
[PT307](#) [943628.5267](#) [683753.2603](#) [401.6352](#)
[PT308](#) [943626.2475](#) [683750.6891](#) [401.4542](#)
[PT309](#) [943622.4039](#) [683748.9201](#) [401.4881](#)
[PT310](#) [943610.2648](#) [683766.1461](#) [401.4962](#)
[PT311](#) [943612.0387](#) [683767.2548](#) [401.5643](#)
[PT312](#) [943617.2167](#) [683773.3478](#) [401.5304](#)
[PT313](#) [943604.4299](#) [683790.0098](#) [401.5655](#)
[PT314](#) [943601.0873](#) [683787.6098](#) [401.6204](#)
[PT315](#) [943598.218](#) [683786.3016](#) [401.6554](#)
[PT316](#) [943586.0103](#) [683803.1995](#) [401.7885](#)
[PT317](#) [943588.5233](#) [683805.8985](#) [401.8065](#)
[PT318](#) [943591.714](#) [683808.3469](#) [401.8456](#)
[PT319](#) [943579.1079](#) [683826.4607](#) [401.9187](#)
[PT320](#) [943575.3681](#) [683824.6648](#) [401.8486](#)
[PT321](#) [943571.4457](#) [683822.26](#) [401.9046](#)
[PT322](#) [943561.396](#) [683841.0167](#) [401.9397](#)
[PT323](#) [943563.6531](#) [683842.5625](#) [401.8987](#)
[PT324](#) [943566.9581](#) [683844.7575](#) [401.9258](#)
[PT325](#) [943554.4378](#) [683864.8661](#) [402.0649](#)
[PT326](#) [943551.3817](#) [683862.7412](#) [402.0289](#)
[PT327](#) [943548.9228](#) [683861.2826](#) [402.0618](#)
[PT328](#) [943535.8388](#) [683879.3339](#) [402.1429](#)
[PT329](#) [943538.8922](#) [683881.1834](#) [402.114](#)
[PT330](#) [943542.1026](#) [683883.083](#) [402.204](#)
[PT331](#) [943530.9396](#) [683903.1817](#) [402.2822](#)
[PT332](#) [943526.8542](#) [683900.8846](#) [402.2491](#)
[PT333](#) [943523.1581](#) [683899.0221](#) [402.4031](#)
[PT334](#) [943511.4923](#) [683917.6451](#) [402.2792](#)
[PT335](#) [943514.739](#) [683919.6465](#) [402.2862](#)
[PT336](#) [943518.0445](#) [683921.5](#) [402.3533](#)
[PT337](#) [943505.8006](#) [683941.223](#) [402.4984](#)
[PT338](#) [943501.1889](#) [683938.8883](#) [402.5274](#)
[PT339](#) [943497.3361](#) [683936.9038](#) [402.5353](#)
ALASE VILLAGE [943494.7758](#) [683935.2259](#) [402.6553](#)
[PT340](#) [943487.3043](#) [683956.8233](#) [402.7385](#)
[PT341](#) [943489.7819](#) [683959.7089](#) [402.7575](#)
[PT342](#) [943493.0901](#) [683961.8955](#) [402.6666](#)
[PT343](#) [943480.0921](#) [683981.2281](#) [402.8557](#)
[PT344](#) [943477.4603](#) [683979.1111](#) [402.7316](#)

[PT345 943473.3492 683976.5894 402.8186](#)
[PT346 943460.7742 683994.7588 403.0757](#)
[PT347 943467.0251 683999.7445 403.3348](#)
[PT348 943464.2529 683997.7579 403.0817](#)
[PT349 943448.7551 684014.6229 403.3758](#)
[PT350 943451.9211 684017.09 403.2569](#)
[PT351 943454.9145 684019.1124 403.3959](#)
[PT352 943443.2138 684038.5313 403.588](#)
[PT353 943439.7865 684036.9625 403.432](#)
[PT354 943435.1743 684034.5073 403.5069](#)
[PT355 943422.9729 684052.1211 403.583](#)
[PT356 943427.307 684055.38 403.6141](#)
[PT357 943430.4895 684057.4076 403.6992](#)
[PT358 943414.8774 684079.2519 403.8163](#)
[PT359 943410.1399 684075.4604 403.6772](#)
[PT360 943407.3851 684073.9407 403.5122](#)
[PT361 943388.6448 684091.4718 403.7762](#)
[PT362 943391.8457 684094.2952 403.7163](#)
[PT363 943395.6373 684098.3464 403.7253](#)
[PT364 943379.293 684114.2439 403.6714](#)
[PT365 943375.7588 684111.5989 403.6683](#)
[PT366 943372.5748 684109.0532 403.6363](#)
[PT367 943355.6978 684124.7617 403.5133](#)
[PT368 943358.2462 684127.4281 403.6634](#)
[PT369 943361.5982 684130.6232 403.6694](#)
[PT370 943344.2061 684146.9629 403.5245](#)
[PT371 943340.8383 684143.1835 403.5764](#)
[PT372 943338.1269 684139.6902 403.5203](#)
[PT373 943320.6924 684154.5711 403.5264](#)
[PT374 943323.6205 684158.1677 403.5614](#)
[PT375 943327.5834 684162.264 403.4665](#)
[PT376 943309.7565 684176.8825 403.4535](#)
[PT377 943305.988 684172.2219 403.3285](#)
[PT378 943301.6684 684169.123 403.5694](#)
[ALENIBORO COMMUNITY 943295.1906 684165.8769 403.0973](#)
[PT379 943284.425 684187.6907 403.1025](#)
[PT380 943287.8642 684190.5568 403.1965](#)
[PT381 943291.5454 684193.5658 403.4116](#)
[PT382 943277.6054 684210.4032 403.1217](#)
[PT383 943273.9365 684207.8053 402.9646](#)
[PT384 943270.9348 684205.8485 402.9056](#)
[PT385 943256.6207 684222.0705 402.6606](#)
[PT386 943261.406 684225.8545 402.7717](#)
[PT387 943264.1889 684227.7611 402.9428](#)
[PT388 943242.6954 684239.7167 402.5087](#)

[PT389](#) [943246.5477](#) [684242.8199](#) [402.5398](#)
[PT390](#) [943250.452](#) [684245.9078](#) [402.5219](#)
[PT391](#) [943235.6224](#) [684264.6083](#) [402.2889](#)
[PT392](#) [943231.2568](#) [684261.1853](#) [402.3969](#)
[PT393](#) [943226.8776](#) [684258.436](#) [402.4078](#)
[PT394](#) [943213.6383](#) [684275.2502](#) [402.0999](#)
[PT395](#) [943217.4194](#) [684278.3404](#) [402.158](#)
[PT396](#) [943221.2829](#) [684281.9056](#) [402.013](#)
[PT397](#) [943205.1744](#) [684300.1505](#) [401.8681](#)
[PT398](#) [943201.3406](#) [684296.5815](#) [401.715](#)
[PT399](#) [943198.0586](#) [684293.6023](#) [401.552](#)
[PT400](#) [943184.4706](#) [684309.0084](#) [401.327](#)
[PT401](#) [943186.9846](#) [684311.3878](#) [401.3761](#)
[PT402](#) [943190.6023](#) [684314.4672](#) [401.3481](#)
[PT403](#) [943176.7069](#) [684332.7967](#) [401.1502](#)
[PT404](#) [943173.6748](#) [684330.5262](#) [400.8842](#)
[PT405](#) [943170.3468](#) [684328.276](#) [401.0601](#)
[PT406](#) [943155.2092](#) [684345.6126](#) [400.8052](#)
[PT407](#) [943157.8364](#) [684348.8567](#) [400.6273](#)
[PT408](#) [943161.3277](#) [684351.9879](#) [400.7473](#)
[PT409](#) [943145.1575](#) [684369.7496](#) [400.2214](#)
[PT410](#) [943142.3349](#) [684367.5714](#) [400.2464](#)
[PT411](#) [943138.8915](#) [684364.7133](#) [400.4823](#)
[PT412](#) [943123.2326](#) [684381.8995](#) [400.2554](#)
[PT413](#) [943126.1959](#) [684384.6415](#) [399.9804](#)
[PT414](#) [943129.0684](#) [684387.6425](#) [400.0895](#)
[PT415](#) [943114.7773](#) [684405.78](#) [399.7496](#)
[PT416](#) [943111.083](#) [684403.7854](#) [399.6165](#)
[PT417](#) [943107.4628](#) [684401.0247](#) [399.6505](#)
[PT418](#) [943091.8415](#) [684419.0445](#) [399.2945](#)
[PT419](#) [943095.3792](#) [684421.478](#) [399.1506](#)
[PT420](#) [943098.9551](#) [684423.8377](#) [399.3997](#)
[PT421](#) [943085.3415](#) [684442.691](#) [399.0988](#)
[PT422](#) [943081.8596](#) [684440.7096](#) [399.0557](#)
[PT423](#) [943078.5202](#) [684438.6023](#) [398.9587](#)
 IDI IGBA COMMUNITY [943075.6787](#) [684436.2337](#) [399.0676](#)
[PT424](#) [943065.9759](#) [684458.9724](#) [398.5508](#)
[PT425](#) [943068.5092](#) [684460.3314](#) [398.3778](#)
[PT426](#) [943071.9397](#) [684463.4258](#) [398.8219](#)
[PT427](#) [943056.6447](#) [684483.0256](#) [398.321](#)
[PT428](#) [943054.5423](#) [684481.0522](#) [398.1469](#)
[PT429](#) [943052.1992](#) [684479.6521](#) [398.1649](#)
[PT430](#) [943038.9297](#) [684498.4989](#) [397.99](#)
[PT431](#) [943041.5844](#) [684500.7572](#) [397.8441](#)
[PT432](#) [943044.1537](#) [684502.6235](#) [397.9951](#)

[PT433](#) [943030.7205](#) [684521.9251](#) [397.7282](#)
[PT434](#) [943027.2382](#) [684519.8957](#) [397.5842](#)
[PT435](#) [943024.1493](#) [684518.0298](#) [397.6521](#)
[PT436](#) [943011.2795](#) [684536.3394](#) [397.4482](#)
[PT437](#) [943013.9786](#) [684538.5772](#) [397.3783](#)
[PT438](#) [943017.8077](#) [684541.2645](#) [397.3963](#)
[PT439](#) [943003.6053](#) [684559.8129](#) [397.0914](#)
[PT440](#) [943000.6897](#) [684557.8405](#) [397.0834](#)
[PT441](#) [942996.4293](#) [684555.0007](#) [397.1223](#)
[PT442](#) [942983.3069](#) [684573.2767](#) [396.8934](#)
[PT443](#) [942987.0958](#) [684576.7556](#) [396.7625](#)
[PT444](#) [942990.1604](#) [684578.7073](#) [396.8495](#)
[PT445](#) [942977.2988](#) [684597.0554](#) [396.7316](#)
[PT446](#) [942974.381](#) [684595.5861](#) [396.6306](#)
[PT447](#) [942970.146](#) [684593.0876](#) [396.6015](#)
[PT448](#) [942957.6471](#) [684611.6192](#) [396.4636](#)
[PT449](#) [942961.3365](#) [684614.4748](#) [396.4547](#)
[PT450](#) [942964.4001](#) [684616.5938](#) [396.4018](#)
[PT451](#) [942948.4289](#) [684638.2917](#) [396.2329](#)
[PT452](#) [942945.3367](#) [684636.3086](#) [396.1168](#)
[PT453](#) [942942.0213](#) [684634.4203](#) [396.2358](#)
[PT454](#) [942928.2963](#) [684652.7347](#) [396.0799](#)
[PT455](#) [942931.5741](#) [684654.9602](#) [396.0239](#)
[PT456](#) [942934.4489](#) [684657.2323](#) [396.01](#)
[PT457](#) [942919.4924](#) [684675.8828](#) [395.8801](#)
[PT458](#) [942916.4728](#) [684673.3947](#) [395.897](#)
[PT459](#) [942913.3979](#) [684670.9453](#) [396.0229](#)
[PT460](#) [942898.0799](#) [684689.1339](#) [395.992](#)
[PT461](#) [942901.1893](#) [684692.0202](#) [395.8401](#)
[PT462](#) [942903.5755](#) [684694.1833](#) [395.6701](#)
[PT463](#) [942881.3438](#) [684705.3767](#) [395.6951](#)
[PT464](#) [942883.541](#) [684707.9028](#) [395.6491](#)
[PT465](#) [942885.9228](#) [684710.7824](#) [395.6662](#)
[PT466](#) [942863.4092](#) [684720.8151](#) [395.5871](#)
[PT467](#) [942865.9324](#) [684724.0461](#) [395.6482](#)
[PT468](#) [942867.7598](#) [684726.7477](#) [395.4832](#)
[PT469](#) [942849.3671](#) [684738.7086](#) [395.5092](#)
[PT470](#) [942847.0685](#) [684735.9157](#) [395.6041](#)
[PT471](#) [942845.2032](#) [684732.8986](#) [395.5361](#)
[PT472](#) [942823.1578](#) [684742.5587](#) [395.53](#)
[PT473](#) [942828.0348](#) [684748.7677](#) [395.4821](#)
[PT474](#) [942831.7779](#) [684754.2576](#) [395.5552](#)
[PT475](#) [942814.6852](#) [684767.0441](#) [395.5912](#)
[PT476](#) [942808.2832](#) [684778.1248](#) [395.5143](#)
[PT477](#) [942802.6298](#) [684776.1885](#) [395.4882](#)

[PT478](#) [942804.9253](#) [684770.4576](#) [395.5472](#)
[PT479](#) [942800.7019](#) [684764.9157](#) [395.5571](#)
[PT480](#) [942798.3098](#) [684761.2379](#) [395.465](#)
[PT481](#) [942784.8894](#) [684770.4043](#) [395.723](#)
[PT482](#) [942787.1349](#) [684773.9475](#) [395.6591](#)
[PT483](#) [942789.1137](#) [684777.2315](#) [395.4491](#)
[PT484](#) [942771.9118](#) [684790.4554](#) [395.7091](#)
[PT485](#) [942769.5658](#) [684787.674](#) [395.6871](#)
[PT486](#) [942767.2751](#) [684783.0602](#) [395.841](#)
[PT487](#) [942746.1962](#) [684794.2045](#) [395.841](#)
[PT488](#) [942747.2074](#) [684798.2786](#) [395.719](#)
[PT489](#) [942750.1152](#) [684802.3606](#) [395.9241](#)
[PT490](#) [942728.5994](#) [684812.4491](#) [395.961](#)
[PT491](#) [942726.4943](#) [684808.765](#) [396.019](#)
[PT492](#) [942724.0019](#) [684805.6696](#) [396.0389](#)
[PT493](#) [942703.8227](#) [684815.8262](#) [396.1288](#)
[PT494](#) [942705.4738](#) [684819.9722](#) [396.0899](#)
[PT495](#) [942706.9138](#) [684823.4574](#) [396.205](#)
[PT496](#) [942685.2176](#) [684831.9825](#) [395.9899](#)
[PT497](#) [942683.2504](#) [684828.7935](#) [396.1598](#)
[PT498](#) [942681.874](#) [684824.9194](#) [396.3408](#)
SABO COMMUNITY [942700.7356](#) [684830.7734](#) [396.12](#)
[PT499](#) [942662.2554](#) [684838.5144](#) [396.1607](#)
[PT500](#) [942660.5857](#) [684835.8979](#) [396.1627](#)
[PT501](#) [942659.3604](#) [684832.4011](#) [396.1977](#)
[PT502](#) [942637.4736](#) [684838.6947](#) [396.816](#)
[PT503](#) [942638.5562](#) [684844.3351](#) [395.8056](#)
[PT504](#) [942640.3038](#) [684848.7554](#) [395.7327](#)
[PT505](#) [942618.5075](#) [684855.8983](#) [396.0546](#)
[PT506](#) [942617.0277](#) [684852.0444](#) [396.0585](#)
[PT507](#) [942615.5106](#) [684848.2592](#) [395.6225](#)
[PT508](#) [942594.6976](#) [684855.0244](#) [395.6774](#)
[PT509](#) [942594.8737](#) [684860.6215](#) [395.6794](#)
[PT510](#) [942596.1613](#) [684864.5323](#) [395.5445](#)
[PT511](#) [942572.82](#) [684870.5496](#) [395.4184](#)
[PT512](#) [942571.9328](#) [684865.2961](#) [395.5373](#)
[PT513](#) [942570.1299](#) [684861.1896](#) [395.5612](#)
[PT514](#) [942547.3865](#) [684867.6452](#) [395.5091](#)
[PT515](#) [942548.2937](#) [684871.5592](#) [395.4762](#)
[PT516](#) [942549.4998](#) [684876.3959](#) [395.4712](#)
[PT517](#) [942527.0676](#) [684883.0739](#) [395.1201](#)
[PT518](#) [942525.3424](#) [684878.1604](#) [395.104](#)
[PT519](#) [942523.7625](#) [684874.7738](#) [395.165](#)
[PT520](#) [942504.4984](#) [684881.5953](#) [395.2779](#)
[PT521](#) [942504.7351](#) [684886.5658](#) [394.918](#)

[PT522](#) [942505.636](#) [684890.5132](#) [394.842](#)
[PT523](#) [942483.5944](#) [684899.0221](#) [394.4579](#)
[PT524](#) [942481.018](#) [684894.2358](#) [394.3448](#)
[PT525](#) [942479.285](#) [684890.7949](#) [394.3748](#)
[PT526](#) [942459.5423](#) [684899.0009](#) [394.0797](#)
[PT527](#) [942461.2753](#) [684903.1202](#) [393.9368](#)
[PT528](#) [942462.9358](#) [684907.1113](#) [393.9938](#)
[PT529](#) [942443.1193](#) [684917.0781](#) [393.9038](#)
[PT530](#) [942440.8494](#) [684913.1487](#) [393.9077](#)
[PT531](#) [942438.5318](#) [684909.2078](#) [394.0016](#)
[PT532](#) [942417.8925](#) [684919.8801](#) [393.6826](#)
[PT533](#) [942418.8122](#) [684923.6578](#) [393.6616](#)
[PT534](#) [942420.6731](#) [684927.4387](#) [393.8017](#)
[PT535](#) [942399.4106](#) [684937.8293](#) [393.8146](#)
[PT536](#) [942397.3716](#) [684934.3422](#) [393.7496](#)
[PT537](#) [942395.3752](#) [684931.3563](#) [393.8265](#)
[PT538](#) [942376.2934](#) [684940.8933](#) [393.1745](#)
[PT539](#) [942377.8315](#) [684945.0571](#) [393.1815](#)
[PT540](#) [942379.881](#) [684949.1363](#) [393.3016](#)
[PT541](#) [942357.8121](#) [684960.8981](#) [392.8755](#)
[PT542](#) [942355.1213](#) [684957.0359](#) [393.0325](#)
[PT543](#) [942352.4667](#) [684952.9538](#) [392.9864](#)
[PT544](#) [942333.6644](#) [684964.0668](#) [393.1104](#)
[PT545](#) [942335.0946](#) [684966.8165](#) [393.0774](#)
[PT546](#) [942336.8785](#) [684970.1311](#) [393.0615](#)
[PT547](#) [942316.7818](#) [684980.7475](#) [393.4094](#)
[PT548](#) [942314.9698](#) [684977.4086](#) [393.2634](#)
[PT549](#) [942312.8463](#) [684973.983](#) [393.4113](#)
[PT550](#) [942292.924](#) [684984.5543](#) [393.6503](#)
[PT551](#) [942294.5479](#) [684988.7684](#) [393.5963](#)
[PT552](#) [942295.7973](#) [684992.1433](#) [393.8044](#)
[PT553](#) [942274.68](#) [685002.9288](#) [394.0113](#)
[PT554](#) [942272.4209](#) [684998.6016](#) [393.9422](#)
[PT555](#) [942270.2904](#) [684995.1759](#) [394.0232](#)
[PT556](#) [942250.0879](#) [685002.7275](#) [394.3881](#)
[PT557](#) [942251.3594](#) [685006.2882](#) [394.2462](#)
[PT558](#) [942252.8767](#) [685010.1529](#) [394.5312](#)
[PT559](#) [942230.9184](#) [685016.9299](#) [394.6821](#)
[PT560](#) [942229.3308](#) [685012.5615](#) [394.62](#)
[PT561](#) [942228.5472](#) [685008.6228](#) [394.753](#)
[PT562](#) [942205.9487](#) [685013.9539](#) [395.0919](#)
[PT563](#) [942206.3166](#) [685017.3805](#) [394.9939](#)
[PT564](#) [942207.3601](#) [685022.4341](#) [395.108](#)
[PT565](#) [942184.4559](#) [685026.3144](#) [395.5768](#)
[PT566](#) [942183.7674](#) [685022.2938](#) [395.4278](#)

[PT567](#) [942182.4283](#) [685018.2884](#) [395.5327](#)
[PT568](#) [942160.8874](#) [685023.07](#) [395.6606](#)
[PT569](#) [942161.6141](#) [685026.8807](#) [395.7736](#)
[PT570](#) [942162.2732](#) [685031.0276](#) [395.7387](#)
[PT571](#) [942138.3589](#) [685037.2751](#) [395.8365](#)
[PT572](#) [942137.2903](#) [685032.0111](#) [395.9045](#)
[PT573](#) [942136.0997](#) [685027.605](#) [395.9264](#)
[PT574](#) [942114.0819](#) [685033.258](#) [395.6873](#)
[PT575](#) [942114.5822](#) [685036.9475](#) [395.6823](#)
[PT576](#) [942115.5937](#) [685041.6827](#) [395.5394](#)
[PT577](#) [942091.745](#) [685045.3212](#) [395.4452](#)
[PT578](#) [942090.9481](#) [685041.7684](#) [395.3602](#)
[PT579](#) [942089.5163](#) [685038.0234](#) [395.4101](#)
[PT580](#) [942067.3633](#) [685042.8022](#) [395.185](#)
[PT581](#) [942067.8411](#) [685046.2946](#) [395.104](#)
[PT582](#) [942068.7372](#) [685050.1092](#) [395.1771](#)
[PT583](#) [942045.6291](#) [685056.0343](#) [394.803](#)
[PT584](#) [942044.3567](#) [685052.0736](#) [394.8289](#)
[PT585](#) [942043.2642](#) [685047.5964](#) [395.2068](#)
[PT586](#) [942022.0781](#) [685052.5735](#) [394.8137](#)
[PT587](#) [942023.0464](#) [685057.479](#) [394.6988](#)
[PT588](#) [942023.9656](#) [685060.6862](#) [394.4838](#)
[PT589](#) [942001.2129](#) [685064.4853](#) [394.5327](#)
[PT590](#) [942000.5514](#) [685061.3667](#) [394.4856](#)
[PT591](#) [941999.882](#) [685057.7357](#) [394.6626](#)
[PT592](#) [941977.9124](#) [685061.9074](#) [394.4264](#)
[PT593](#) [941978.2384](#) [685065.2384](#) [394.2385](#)
[PT594](#) [941978.6397](#) [685068.7095](#) [394.2355](#)
[PT595](#) [941956.1329](#) [685073.9571](#) [394.0724](#)
[PT596](#) [941955.4305](#) [685070.579](#) [393.9873](#)
[PT597](#) [941954.8629](#) [685067.2672](#) [394.1103](#)
[PT598](#) [941931.1109](#) [685071.4514](#) [393.9181](#)
[PT599](#) [941931.8133](#) [685075.6797](#) [393.5872](#)
[PT600](#) [941932.5542](#) [685079.0256](#) [393.5632](#)
[PT601](#) [941910.1274](#) [685084.4853](#) [393.4451](#)
[PT602](#) [941908.8854](#) [685081.2404](#) [393.3271](#)
[PT603](#) [941907.483](#) [685077.6353](#) [393.454](#)
[PT604](#) [941884.6497](#) [685083.9101](#) [393.3579](#)
[PT605](#) [941886.8225](#) [685091.7512](#) [393.294](#)
[PT606](#) [941885.5771](#) [685088.0566](#) [393.2559](#)
[PT607](#) [941864.4542](#) [685098.7064](#) [393.3139](#)
[PT608](#) [941862.4252](#) [685093.9467](#) [393.4578](#)
[PT609](#) [941861.6913](#) [685089.2418](#) [393.2957](#)
[PT610](#) [941840.8388](#) [685096.1581](#) [393.3476](#)
[PT611](#) [941841.2315](#) [685100.202](#) [393.3317](#)

[PT612](#) [941842.4802](#) [685104.1253](#) [393.2928](#)
[PT613](#) [941820.1712](#) [685110.6963](#) [393.4426](#)
[PT614](#) [941818.7218](#) [685106.7191](#) [393.3076](#)
[PT615](#) [941816.1128](#) [685101.3931](#) [393.4565](#)
[PT616](#) [941795.8031](#) [685109.5647](#) [393.6834](#)
[PT617](#) [941798.3814](#) [685117.7795](#) [393.4445](#)
[PT618](#) [941797.1034](#) [685114.5376](#) [393.4265](#)
[PT619](#) [941773.5708](#) [685116.5524](#) [393.4543](#)
[PT620](#) [941774.6648](#) [685120.42](#) [393.3884](#)
[PT621](#) [941776.1148](#) [685125.5019](#) [393.5564](#)
[PT622](#) [941752.8201](#) [685132.0982](#) [393.1173](#)
[PT623](#) [941751.0131](#) [685126.7158](#) [393.2072](#)
[PT624](#) [941749.2822](#) [685122.1811](#) [393.2872](#)
[PT625](#) [941729.0303](#) [685128.7752](#) [392.9981](#)
[PT626](#) [941729.4633](#) [685133.1793](#) [392.8461](#)
[PT627](#) [941730.8535](#) [685137.1978](#) [392.7742](#)
[PT628](#) [941709.2981](#) [685144.0612](#) [392.3991](#)
[PT629](#) [941707.4574](#) [685139.2507](#) [392.423](#)
[PT630](#) [941705.3222](#) [685135.4118](#) [392.5969](#)
[PT631](#) [941685.829](#) [685151.2839](#) [391.8119](#)
[PT632](#) [941684.1103](#) [685145.6923](#) [391.8919](#)
[PT633](#) [941682.5799](#) [685141.7543](#) [391.8788](#)
[PT634](#) [941659.483](#) [685148.8559](#) [391.2957](#)
[PT635](#) [941660.7388](#) [685153.8004](#) [390.9597](#)
[PT636](#) [941662.2962](#) [685158.4075](#) [391.1748](#)
[PT637](#) [941642.5668](#) [685165.5895](#) [390.7387](#)
[PT638](#) [941640.6177](#) [685161.1986](#) [390.6247](#)
[PT639](#) [941638.6665](#) [685156.8328](#) [390.7506](#)
[PT640](#) [941617.0918](#) [685164.7728](#) [390.1645](#)
[PT641](#) [941618.4436](#) [685169.5335](#) [390.0186](#)
[PT642](#) [941620.9271](#) [685174.5754](#) [390.0676](#)
[PT643](#) [941599.5417](#) [685181.5604](#) [389.3895](#)
[PT644](#) [941597.3606](#) [685176.9095](#) [389.4675](#)
[PT645](#) [941595.2113](#) [685171.7891](#) [389.3384](#)
[PT646](#) [941573.5071](#) [685178.976](#) [388.6103](#)
[PT647](#) [941574.8928](#) [685183.2655](#) [388.5753](#)
[PT648](#) [941576.836](#) [685187.8655](#) [388.2504](#)
[PT649](#) [941555.5342](#) [685194.7273](#) [387.9843](#)
[PT650](#) [941553.8172](#) [685190.7789](#) [387.9912](#)
[PT651](#) [941551.994](#) [685188.0741](#) [387.8992](#)
[PT652](#) [941534.1789](#) [685203.6529](#) [388.6022](#)
[PT653](#) [941510.7258](#) [685205.6168](#) [388.307](#)